




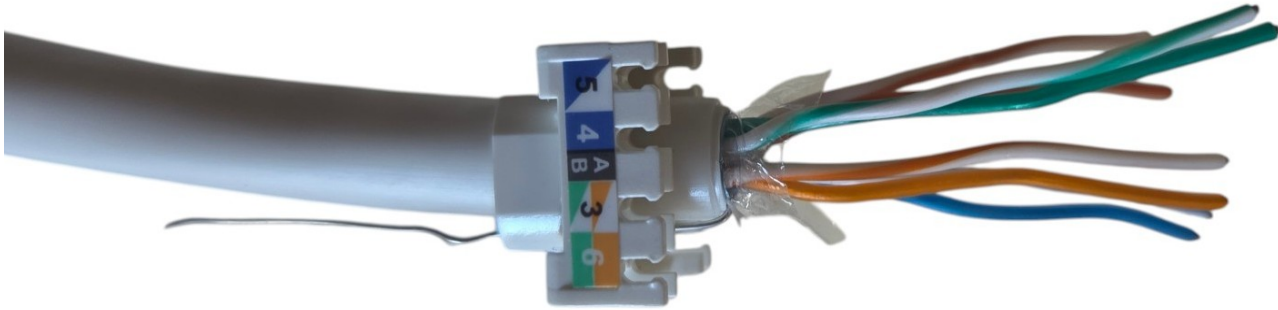

Step#1: Put the cable through the wire cap.

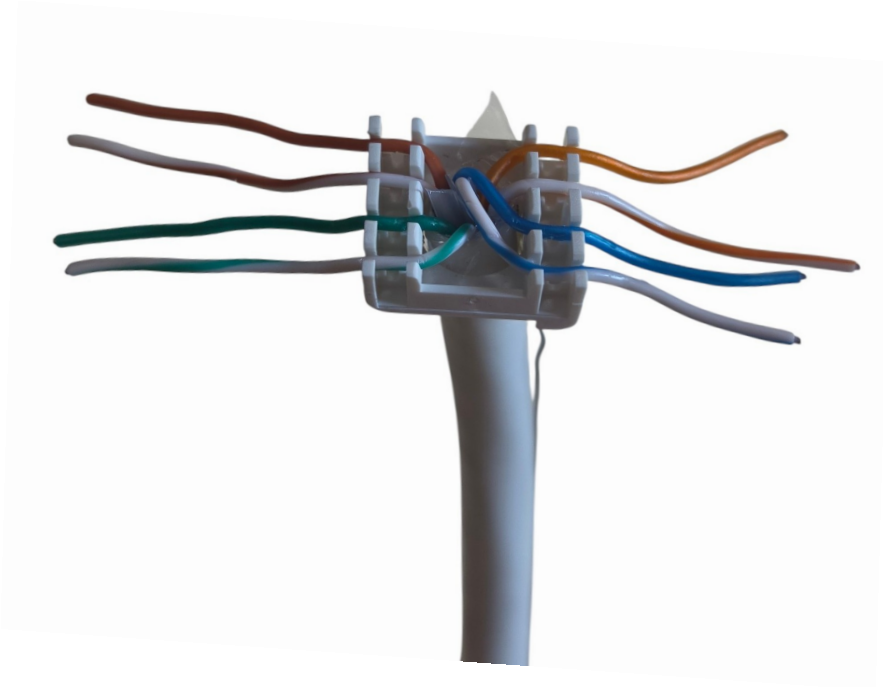

Step#2: Spread each pair and pre-load each pair to the designated wiring.

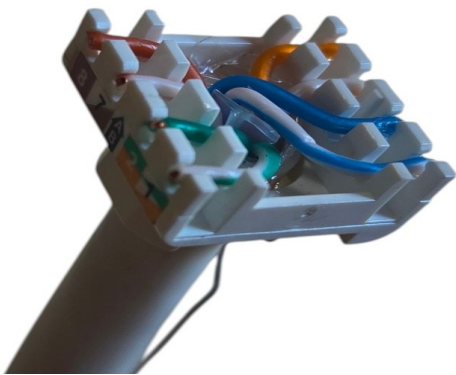

Step#3: Trim flush excess wires.



Step#4: Load the wired cap to the keystone jack.



Step#5: Evenly press the wings towards to each other.



Step#6: Wrap the cable tie around the holder neck to enhance the strain relief of cable back feeding force.
Cut of the excess cable tie- Done!